For Style 1108P32 Assembly Instruction Sheet #S-1108P32


s Requised: Plainand screed/ner, Philips screed/ner, plies, wise culture, whe strippers, electrical type, safety glasses. Source: (1) 120v LED "SAM DIMANSI.E (40001) Resident Assessiby Tribes: 20-30 minutes set if any parts are missing or damaged, do not ellemnyt to exemble, Install, or operate the folium. Contact outcomer service for explanament. ediver, place, wire culture, wire strippere, electrical tape, safety glasses

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consuit a floarned electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the thouse. We strongly recommend that a floarnesd, professional electrician perform the installation.


Disconnect ficture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

Package Contents

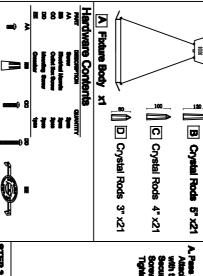

A. Pase the supply wires through the Crossbar (EE).

Attach the Crossbar (EE) to the Outet Box (CC)
with the head of the Green Ground Screw facing you. STEP 2 - Attach Crossber to Outlet Box

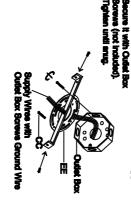

STEP 3 - Fit Ceiling Canopy to Crossbar Assembly.

and Hex Nuts to Groest A. Line up a set of holes on the

on the ceiling caropy.

Thread Mounting Screws (DD)

ber (EE) and Holes

The fine holes on the

dure the national same

Figure 1


Figure 3

its onto the Mounting ceeber (EE). Page Lock where and thread Hex

0000


STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crossber

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Screw (AA). Note: The ceiling canopy should Mounting Screws (DD) by unscrewing the Hex Nut and Look Washer and Once the celling canopy is secure, remove the Screw be anug against the calling and the Screw (AA).
If not, adjust the length of the (AA) and ceiling canopy nd proceed to Step 4. en screwing Mounting ewa (DD) in or out of the 000 Canopy

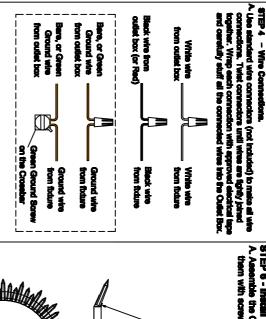


A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the hoise in the ceiling canopy with the Mounting Screws (DD). Secure with Screw (AA) and hand tighten until STEP 5 - Inetail Ceiling Canopy to Ceilin

Figure 4

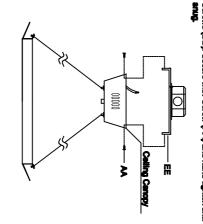

A. Assemble the Crystals on the Fixture frames then fix STEP 6 - Install Oval Crystal . them with screws. 0000

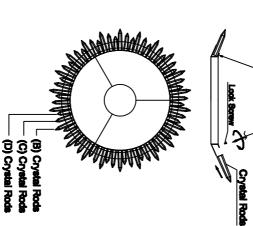

B Crystal Rods 5" x21

C Crystal Rods 4" x21

8 D Crystal Rods 3" x21

Figure 5